







Console effects pedal is a cartridge based device. There are 3 effect control pots onboard and a Blend pot for mix dry and effected signals. Each cartridge has three effects. To use it just insert cartridge any side into the slot and press reset/load button.

1-2-3 program selector switches active effect from the cartridge.

10

X-Y-Z parameters are described in the instructions for each cartridge.

NSOLE